


**Installation and Operating Instructions for
Internal Freewheels FCN ... R**

E 08.753 e

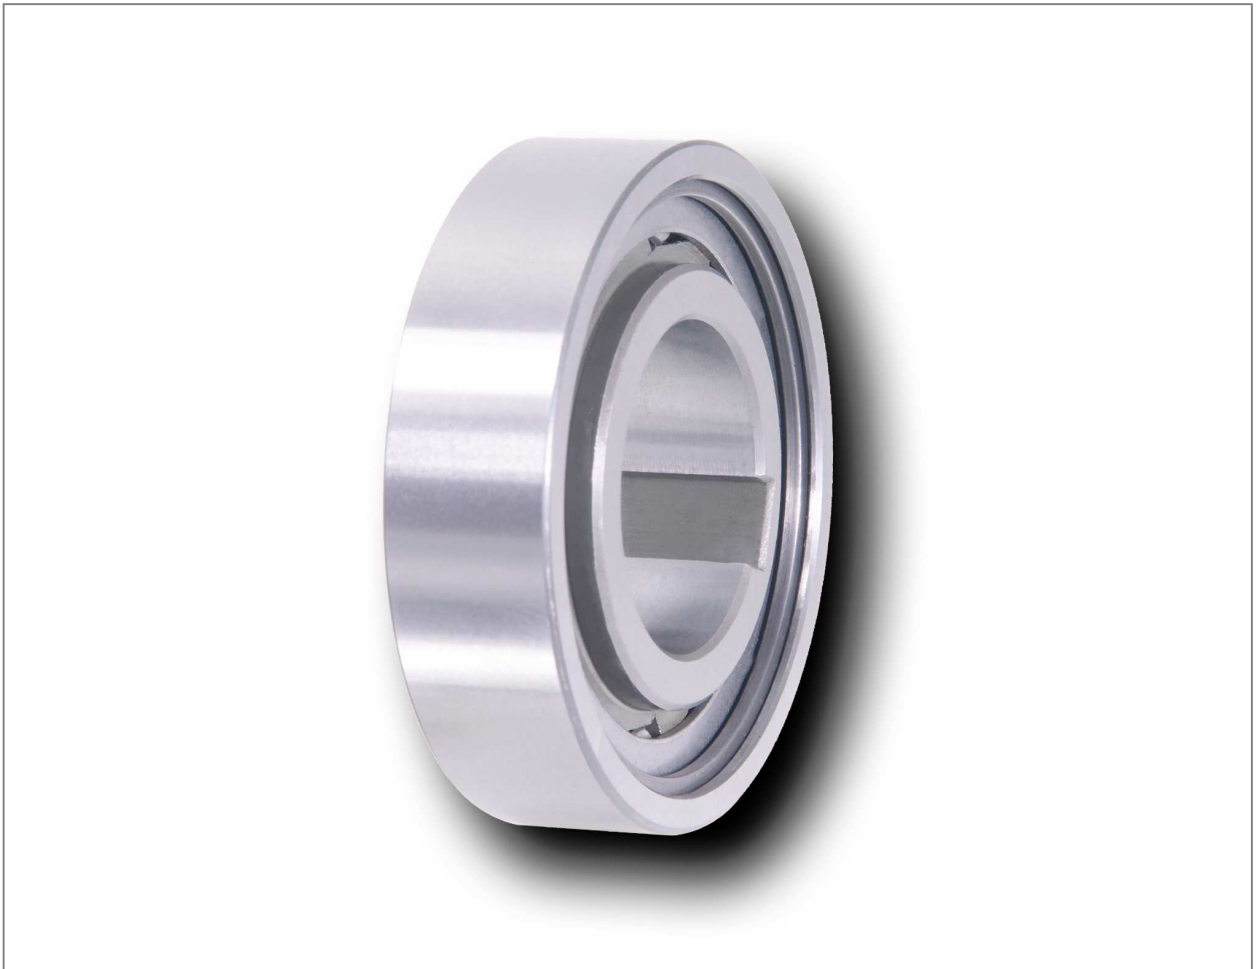

RINGSPANN GmbH

Schaberweg 30-34
61348 Bad Homburg
Germany

Telephone +49 6172 275-0
Telefax +49 6172 275-275

www.ringspann.com
mailbox@ringspann.com

| | | | | | |
|-------------------|--|-------------------|-----------|----------------|----------|
| RINGSPANN | Installation and Operating Instructions for Internal Freewheels FCN...R | E 08.753 e | | | |
| Stand: 08.07.2011 | Version : 2 | gez.: Su | gepr.: Ei | Seitenzahl: 10 | Seite: 2 |

Important

Please read these instructions carefully before installing and operating the product. Your particular attention is drawn to the notes on safety.

These installation and operating instructions are valid on condition that the product meets the selection criteria for its proper use. Selection and design of the product is not the subject of these installation and operating instructions.

Disregarding or misinterpreting these installation and operating instructions invalidates any product liability or warranty by RINGSPANN; the same applies if the product is taken apart or changed.

These installation and operating instructions should be kept in a safe place and should accompany the product if it is passed on to others – either on its own or as part of a machine – to make it accessible to the user.

Safety Notice

- Installation and operation of this product should only be carried out by skilled personnel.
- Repairs may only be carried out by the manufacturer or accredited RINGSPANN agents.
- If a malfunction is indicated, the product or the machine into which it is installed, should be stopped immediately and either RINGSPANN or an accredited RINGSPANN agent should be informed.
- Switch off the power supply before commencing work on electrical components.
- Rotating machine elements must be protected by the purchaser to prevent accidental contact.
- Supplies abroad are subject to the safety laws prevailing in those countries.

| | | | | | |
|-------------------|--|----------|-----------|-------------------|----------|
| RINGSPANN | Installation and Operating Instructions for Internal Freewheels FCN...R | | | E 08.753 e | |
| Stand: 08.07.2011 | Version : 2 | gez.: Su | gepr.: Ei | Seitenzahl: 10 | Seite: 3 |

1. General introduction

Internal Freewheels FCN...R are machine elements with particular characteristics:

- In one direction of rotation there is no contact between the inner and outer ring; the freewheel is in freewheeling operation.
- In the other direction of rotation there is contact between the inner and outer ring; in this direction it is possible to transmit high torque.

Internal Freewheels FCN...R are used as:

- Backstops
- Overrunning Clutches
- Indexing Freewheels



Caution!

As Freewheels can be used as safety components, it is important to observe these installation and operating instructions carefully.

2. Applications of Freewheels

2.1 Application as Backstop

Freewheels are used as backstops if reverse rotation of the operating direction is to be prevented. In many machines and installations, for technical safety or functional reasons, it is necessary to ensure that you are working in just one specified direction of rotation. This is why there are legal stipulations requiring a mechanical safety device for the operation of, e.g. conveyor systems.

The normal operating mode of a backstop is freewheeling operation; the locking (torque transmission) is performed at zero speed. The immediate engagement of the clamping elements ensures the required high operating safety.

2.2 Application as Overrunning Clutch

The overrunning clutch engages machines or machine parts and automatically interrupts their contact as soon as the driven part of the overrunning clutch is turned faster than the driving part. In many cases, this can replace a more expensive externally actuated clutch.

With overrunning clutches the engagement take place in the driving operation (torque transmission), while in freewheeling operation the torque transmission between the inner and outer ring is interrupted. In driving operation the speeds of the inner and outer ring are equal, while in freewheeling operation they are different.

2.3 Application as Indexing Freewheel

The indexing freewheel transmits a back-and-forth motion into a stepped rotation (indexed feed). The RINGSPANN indexing freewheel works precisely and quietly and enables an infinitely adjustable setting of the feed.

3. Design

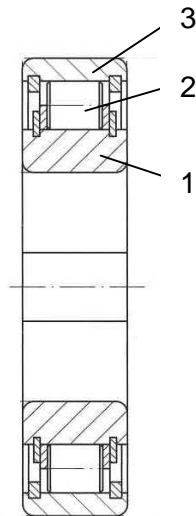


Fig. [1] FCN...R

The Internal Freewheels FCN...R are designed as shown in Fig. [1]. The essential functional components are the inner ring (1), the clamping rollers (2), the outer ring (3) and the lubricant.

Internal Freewheels FCN...R are without bearing support. Concentric alignment of inner and outer ring must be provided by the customer.

4. Types

Internal Freewheels FCN...R are available in the standard type.



Please note!

Further information especially on design, function and selection, permissible torques or permissible speeds of these freewheels is provided in RINGSPANN Catalog 84 "Freewheels". Please contact RINGSPANN GmbH if you need assistance.

| | | | | | |
|-------------------|--|----------|-----------|-------------------|----------|
| RINGSPANN | Installation and Operating Instructions for Internal Freewheels FCN...R | | | E 08.753 e | |
| Stand: 08.07.2011 | Version : 2 | gez.: Su | gepr.: Ei | Seitenzahl: 10 | Seite: 5 |

5. General instructions



Caution!

Reliable torque transmission between the freewheel is guaranteed only if the maximum permissible speed in driving operation of the freewheel is not exceeded.

Operation at speeds in excess of the speeds permitted for the different operating modes can result in damage and overheating of the freewheel!



Caution!

The maximum permissible freewheel torque must not be exceeded due to torque peaks in specific applications.

The maximum freewheel torque should be calculated according to RINGSPANN catalog 84. Please contact RINGSPANN if you need assistance.

Freewheel damage resulting by excessive torque peaks impair component function and can result in excessive overheating of the freewheel!



Danger to life and limb!

When freewheels are used as backstops, it is essential to ensure that they can be released only when the machine or system is standing still and load-free.

Release of the freewheel under load conditions results in uncontrolled reverse movement of the system.



Caution!

Internal Freewheels FCN..R are without bearing support. Concentric alignment of inner and outer ring must be provided by the customer.



Caution!

Torsion vibrations (amplitudes and frequencies which result in engagement and release of the freewheel in rapid succession) must be avoided.

Torsion vibrations can result in overheating and the impairment of freewheel function!

| | | | | | |
|-------------------|--|----------|-----------|-------------------|----------|
| RINGSPANN | Installation and Operating Instructions for Internal Freewheels FCN...R | | | E 08.753 e | |
| Stand: 08.07.2011 | Version : 2 | gez.: Su | gepr.: Ei | Seitenzahl: 10 | Seite: 6 |

6. Condition at delivery

The freewheels are delivered ready to install. They are packed in anti-corrosion paper.

7. Technical requirements for safe operation

The bore in the inner ring normally has a tolerance of ISO H7. The tolerance of the shaft must be in this case ISO h6 or j6.

The key must have back play and may have only minimal width oversize, as otherwise the inner ring may be deformed.

The tolerance of the housing bore must be ISO H7 or J6.

In order to transmit the torques in the table of RINGSPANN Catalog 84 („Freewheels“), the outer ring must be pressed in a housing with the minimum outside diameter in this Catalog. The housing is made of steel or grey cast iron in the minimum quality GG-20.



Caution!

The tolerance of the housing bore to ISO H7 and J6 must be complied with mandatory.

Risk of loss function!

| | | | | | |
|-------------------|--|----------|-----------|-------------------|----------|
| RINGSPANN | Installation and Operating Instructions for Internal Freewheels FCN...R | | | E 08.753 e | |
| Stand: 08.07.2011 | Version : 2 | gez.: Su | gepr.: Ei | Seitenzahl: 10 | Seite: 7 |

8. Installation

Carefully clean the housing bore for the outer ring and the surface of the shaft for the inner ring.

The direction of machine or system rotation must be determined prior to freewheel installation.

Mark this direction with an arrow on the shaft to which the inner ring of the freewheel is to be mounted.

Ensure that the freewheeling direction of the freewheel matches the direction marked on the shaft.



Caution!

When a freewheel is used as a backstop, the drive must not be started in the direction opposite the freewheeling direction of the freewheel, as otherwise the freewheel may be destroyed!

Installation of the freewheel on the shaft or into the housing bore must be made by a front-side even pressure on the inner and outer ring.

Secure the inner ring of the freewheel along the axial plane of the shaft.



Caution!

The communicable or specified torques are only guaranteed if the permissible eccentricity between the customer shaft to the housing bore of the freewheel in the customer part (see table 1) are met.

Compliance with the allowable eccentricity must be guaranteed by the customer-defined storage and centering the freewheeling parts.



Caution!

Inner and outer ring of the freewheel may not be axially braced against each other.



Caution!

If the permissible eccentricity of the customer shaft to the housing bore of the freewheel in the customer part (see table 1) is exceeded, the machine related causes for the improper course deviations to determine and rectify!

Table 1:

| Freewheel size | Permissible eccentricity from the customer shaft to the housing bore of the freewheel [mm] |
|----------------|--|
| FCN 8 R | 0,02 |
| FCN 10 R | 0,02 |
| FCN 12 R | 0,02 |
| FCN 15 R | 0,02 |
| FCN 20 R | 0,04 |
| FCN 25 R | 0,04 |
| FCN 30 R | 0,04 |
| FCN 35 R | 0,06 |
| FCN 40 R | 0,06 |
| FCN 45 R | 0,06 |
| FCN 50 R | 0,06 |
| FCN 60 R | 0,10 |
| FCN 80 R | 0,10 |

So that these values can be kept, should ball bearing with normal tolerance directly apart from the freewheel arranged become.

9. Inspection prior to commissioning

The freewheeling operating of the freewheel must be tested before use.

It is an oil lubrication with the oil quality in accordance with the oil selection table in Section 11 "Lubricants" to use.

We recommend an oil level up to the mid-shaft for horizontal mounting of the freewheel.

10. Maintenance



Caution!

The first oil change must be performed after 20 hours of operation!

During the first oil change, all particles accumulated during the "running in" procedure should be removed from the freewheel. That is why this oil change is required to ensure the service life of the freewheel.

Subsequent oil changes must be performed after every 2,000 operating hours, at a minimum.

**Information!**

For a longer interval of oil change, we recommend using the synthetic lubricant MOBIL SHC 626.

If this lubricant is used, it must be changed after every 4,000 operating hours.

When the speed difference between the inner and outer ring will be less than 100 min^{-1} longer oil change intervals are allowed after consultation.

**Caution!**


If seal problems occur (leakage) during operation, the machine or system must be shut down immediately. Determine the cause of the leak and replace the freewheel if necessary!

11. Lubricants

Please follow the instructions in Section 9 before commissioning. We recommend the following grades of oil for lubrication or oil changes:

| Oil table | | | |
|---|--|---|---|
| Ambient temperature | For ambient temperatures from 0 °C to 50 °C | For ambient temperatures from –15 °C to +15 °C | For ambient temperatures from – 40 °C to 0 °C |
| Kinematic viscosity at 40 °C, ISO-VG | 46/68 [mm²/s] | 32 [mm²/s] | 10 [mm²/s] |
| AGIP | OSO 46/68 | OSO 32 | OSO 10 |
| ARAL | VITAM GF 46/68 | VITAM GF 32 | VITAM GF 10 |
| BP | ENERGOL HLP 46/68 | ENERGOL HLP 32 | AERO HYDRAULIC 1 |
| CASTROL | VARIO HDX | VARIO HDX | ALPHASYNTH 15 |
| CHEVRON | EP HYDRAULIC OIL 46/68 | EP HYDRAULIC OIL 32 | HYJET IV |
| DEA | ASTRON HLP 46 | ASTRON HLP 32 | ASTRON HLP 10 |
| ELF | ELFOLNA 46 | ELFOLNA 32 | ELF AVIATION HYDRAULIC OIL 20 |
| ESSO | NUTO H 46/68 | NUTO H 32 | UNIVIS J 13 |
| KLÜBER | LAMORA HLP 46/68 | LAMORA HLP 32 | Klüberoil 4 UH1-15 |
| MOBIL | D.T.E. 25/26 | D.T.E. 24 | AERO HF A |
| SHELL | TELLUS OIL 46/68 | TELLUS OIL 32 | TELLUS OIL 10 |
| Other manufacturers | Gearbox- or hydraulic oils without solid lubricants ISO-VG 46/68 | Gearbox- or hydraulic oils without solid lubricants ISO-VG 32; Automatic transmission fluids [ATF] | Gearbox- or hydraulic oils without solid lubricants ISO-VG 10; Note setting point! Aviation hydraulic oils ISO-VG 10. |

Please contact us if temperatures exceed + 50 °C or fall below – 40 °C.

| | |
|---|---|
|  | <p>Caution!</p> <p>Oils that contain friction-reducing additives like molybdenum disulfide or the like, may only be used with our authorisation.</p> |
|---|---|